


Collection: ROHAN

Installation manual for LD5006D30 D36"H19"L6

Installation instructions:

- 1. Install the metal tube (P9) on the lampbody (P12)
- 2. Black wire from ceiling (junction box) attaches to "L" wire from the fixture.
- 3. White wire from ceiling (junction box) attaches to "N" wire from the fixture.
- 4. "E" wire from the fixture is attaced to the mounting bracket and an additional "E" wire from the mounting bracket must be secured to the junction box.
- 5. Secure mounting bracket to the junction box.
- 6. Insert screws (P2) in side of top unit the mounting bracket.
- 7. Fix the loop (P3) to screw tube, then cover the canopy (P4) and fix it by canopy ring (P5).
- 8. Install the bulbs (not included) into the lamp fixture

The end!

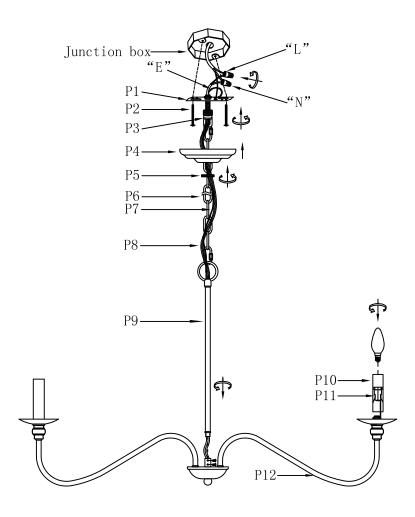

"L" = Hot wire "N" = Neutral wire "E" = Ground wire

PARTS LIST

picture	Description	Qty	Check	list
	L4" Mounting bracket	1		
_	8/32-32 Screw	2		
	Canopy loop (Canopy part)	1		
	ø 5.2″ canopy plate	1		
	Canopy ring (Canopy part)	1		
000000	L59"CHAINO4PBK/BR/PN Plain Desigm	1		
\	Ground wire	1		
}	Power Cord 79" SPT-1-18#	1		
	L16.0" tube	1		
	D1"*3.5"tube	6		
	E12 lampholder	6		
tst	D30"*H8.4" 1ampbody	1		
		L4" Mounting bracket 8/32-32 Screw Canopy loop (Canopy part) \$\int_{0.5}^{5}.2\tilde{''} canopy plate Canopy ring (Canopy part) L59\tilde{''}CHAINO4PBK/BR/PN Plain Desigm Ground wire Power Cord 79" SPT-1-18# L16.0\tilde{''} tube D1\tilde{''}*3.5\tilde{''}tube E12 lampholder D30\tilde{''}*H8.4\tilde{''}	L4" Mounting bracket	L4" Mounting bracket 1 8/32-32 Screw 2 Canopy loop (Canopy part) 1 Ø5. 2" canopy plate 1 Canopy ring (Canopy part) 1 L59"CHAINO4PBK/BR/PN Plain Desigm 1 Ground wire 1 Power Cord 79" SPT-1-18# 1 L16. 0" tube 1 D1"*3. 5" tube 6 E12 lampholder 6 D30"*H8. 4"