


INSTRUCTIONS


For Assembling and Installing Fixtures in Canada
 Pour L'assemblage et L'installation Au Canada

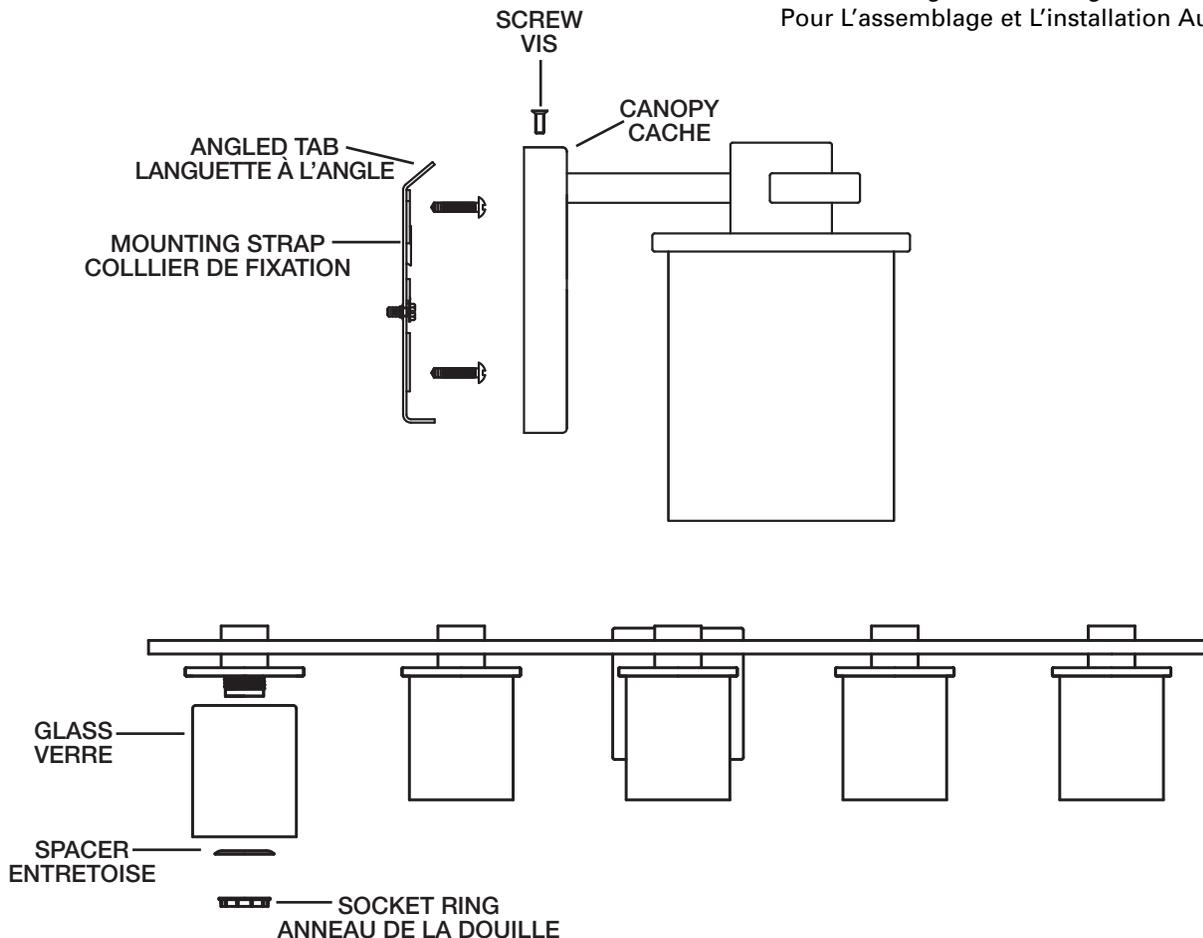

- 1) **TURN OFF POWER.**
IMPORTANT: Before you start, NEVER attempt any work without shutting off the electricity until the work is done.
 - a) Go to the main fuse, or circuit breaker, box in your home. Place the main power switch in the "OFF" position.
 - b) Unscrew the fuse(s), or switch "OFF" the circuit breaker switch(s), that control the power to the fixture or room that you are working on.
 - c) Place the wall switch in the "OFF" position. If the fixture to be replaced has a switch or pull chain, place those in the "OFF" position.
- 2) At the center of the mounting strap are knockout slots. Remove the set that matches your outlet box.
- 3) Attach mounting strap to outlet box. **NOTE:** The mounting strap should be positioned so the angled tab is on the top of the mounting strap.
- 4) Connect fixture ground wire to outlet box ground wire with wire connector. Never connect ground wire to black or white power supply wire.
- 5) Make wire connections (connectors not provided). Reference chart below for correct connections and wire accordingly.

| Connect Black or Red Supply Wire to: | Connect White Supply Wire to: |
|---|---|
| Black | White |
| *Parallel cord (round & smooth) | *Parallel cord (square & ridged) |
| Clear, Brown, Gold or Black without tracer | Clear, Brown, Gold or Black with tracer |
| Insulated wire (other than green) with copper conductor | Insulated wire (other than green) with silver conductor |

*Note: When parallel wires (SPT I & SPT II) are used. The neutral wire is square shaped or ridged and the other wire will be round in shape or smooth (see illus.)




- 6) Push fixture to wall. Place canopy of fixture over tabs on mounting bracket.
NOTE: Be certain wires do not get pinched between canopy and mounting strap.
- 7) Thread screw into hole on top of canopy. Tighten screw to secure fixture in place.
- 8) Raise glass up to fixture passing hole in glass over socket.
- 9) Slip spacer over socket and screw socket ring onto socket. (DO NOT over tighten.)

- 1) **COUPER LE COURANT ÉLECTRIQUE.**
IMPORTANT: TOUJOURS couper l'électricité avant de commencer le travail.
 - a) Localiser le coffret à fusibles ou le disjoncteur du domicile. Mettre l'interrupteur principal en position d'Arrêt.
 - b) Dévisser le ou les fusibles (ou mettre le disjoncteur sur Arrêt) qui contrôlent l'alimentation vers le luminaire ou la pièce dans laquelle le travail est effectué.
 - c) Mettre l'interrupteur mural en position d'Arrêt. Si le luminaire à remplacer est doté d'un interrupteur ou d'une chaîne connectée à l'interrupteur, placer ces éléments en position d'Arrêt.
- 2) Au centre du barrette de montage se trouvent des fentes amovibles. Enlever l'ensemble correspondant à votre boîte à prises.
- 3) Visser la barrette de montage à la boîte de jonction. **NOTE:** La barrette de montage doit être placé de sorte la languette à l'angle est sur le haut de la barrette de montage.
- 4) Avec l'attache-fil, connecter le fil de mise à la terre au fil d'alimentation noir ou à celui qui est blanc.
- 5) Connecter les fils (connecteurs non fournis). Se reporter au tableau ci-dessous pour faire les connexions.

| Connecter le fil noir ou rouge de la boîte | Connecter le fil blanc de la boîte |
|---|--|
| A Noir | A Blanc |
| *Au cordon parallèle (rond et lisse) | *Au cordon parallèle (à angles droits et strié) |
| Au transparent, doré, marron, ou noir sans fil distinctif | Au transparent, doré, marron, ou noir avec un til distinctif |
| Fil isolé (sauf fil vert) avec conducteur en cuivre | Fil isolé (sauf fil vert) avec conducteur en argent |

*Remarque: Avec emploi d'un fil parallèle (SPT I et SPT II). Le fil neutre est à angles droits ou strié et l'autre fil doit être rond ou lisse (Voir le schéma).



- 6) Pousser le luminaire contre le mur. Placer le cache du luminaire sur les languettes sur le support de montage.
REMARQUE: S'assurer que les fils ne se coincent pas entre le cache et la bride de montage.
- 7) Serrer la vis dans le trou sur le dessus et le dessous du cache. Resserrer la vis pour fixer le luminaire.
- 8) Soulevez le verre jusqu'au trou de passage de l'ornement dans le verre au-dessus de la douille.
- 9) Glissez l'espaceur au-dessus de la douille et vissez l'anneau dans la douille. (NE PAS trop serrer).